


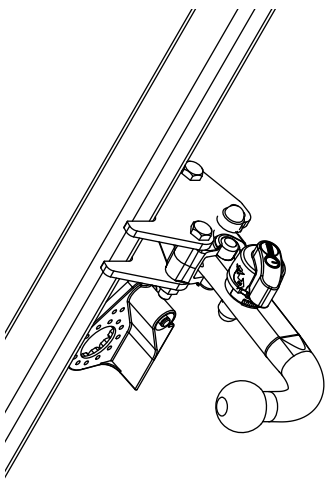
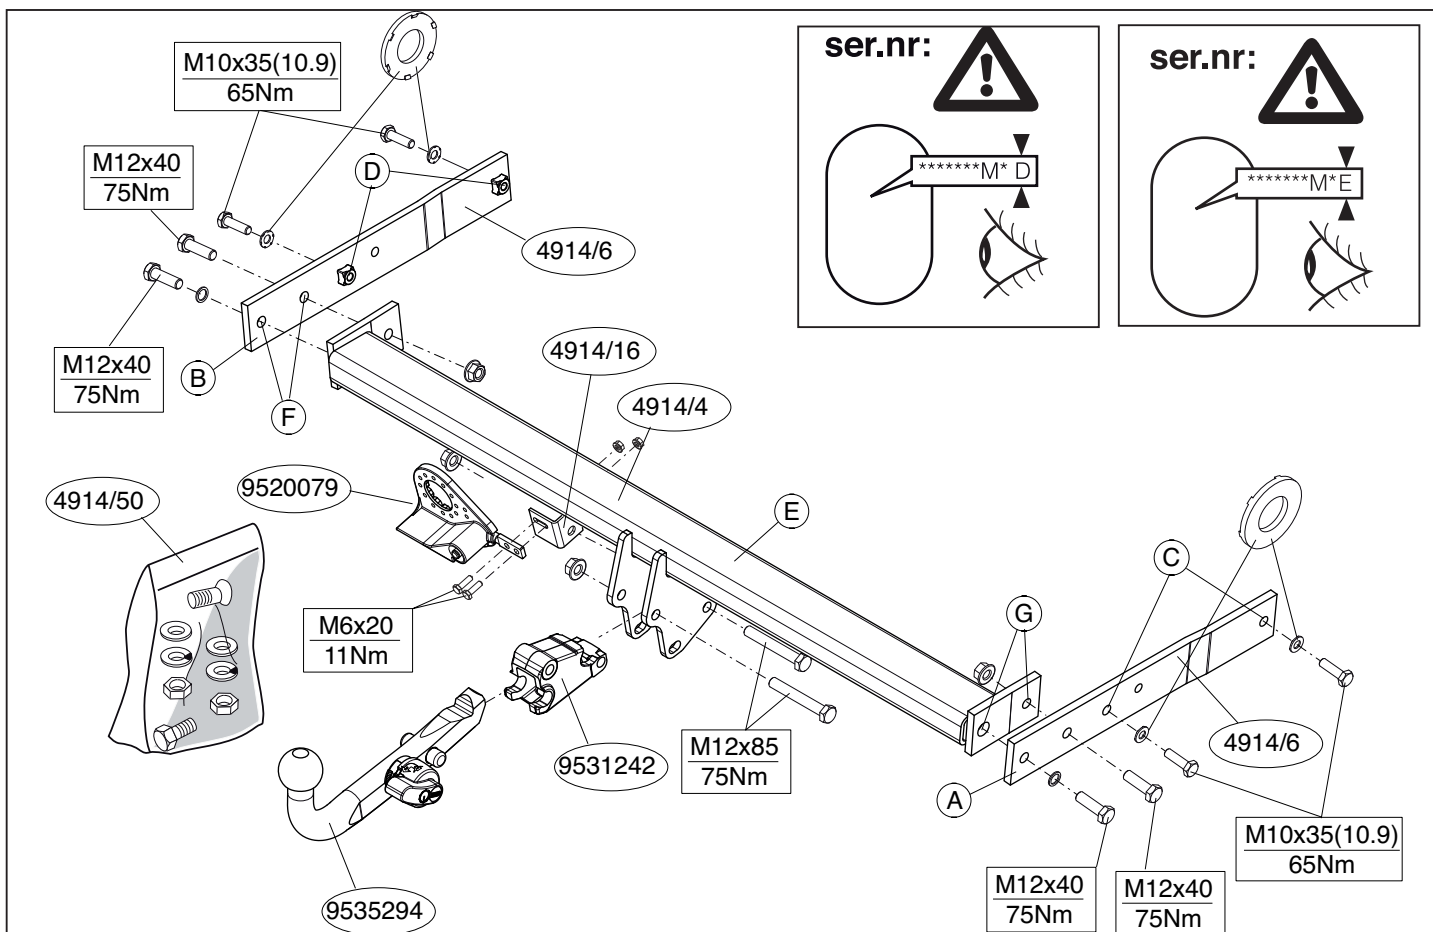


Fitting instructions	
Make:	Volkswagen
Tiguan; 2007->	
Tiguan R-Line(Exterior); 2012->	
Type:	4914





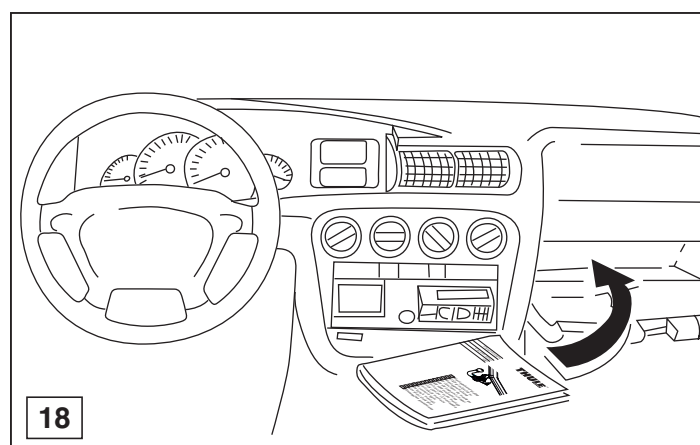


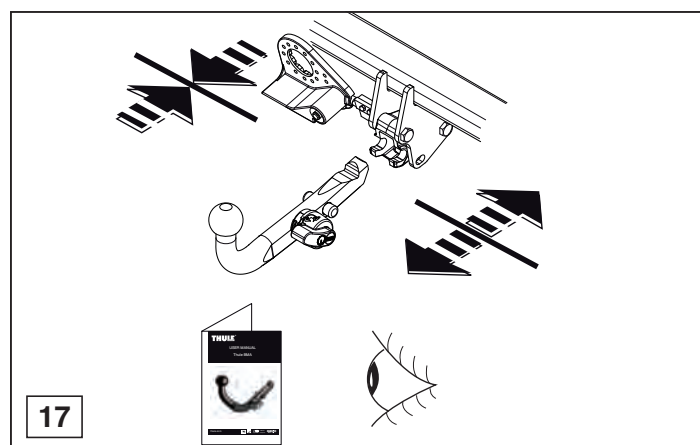


© 491470/19-10-2012/1




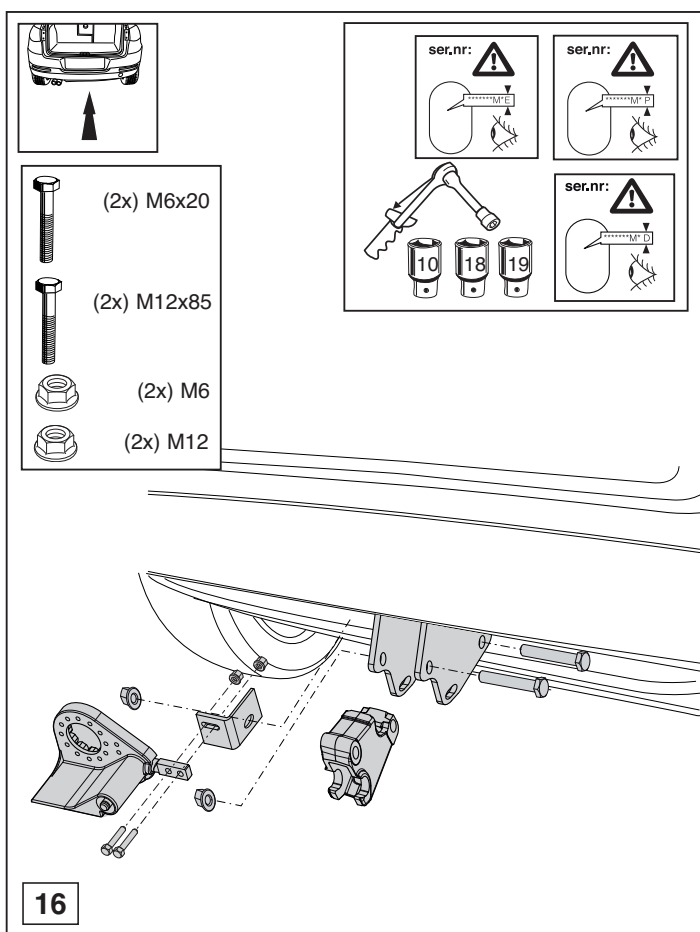


© 491470/19-10-2012/10








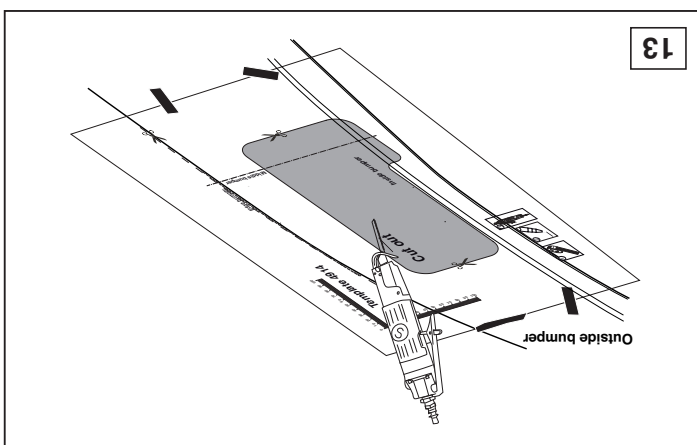
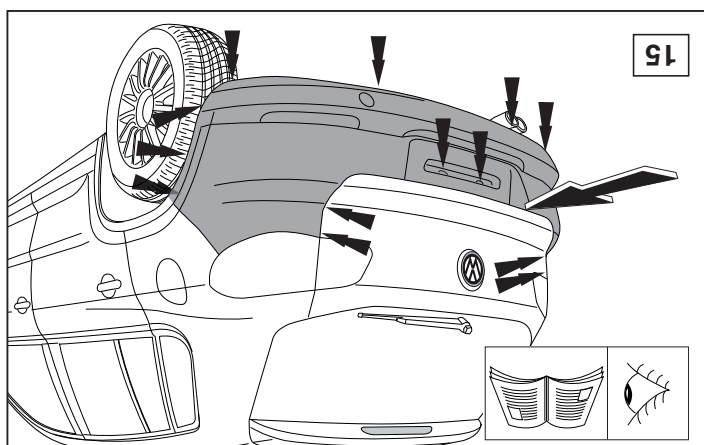
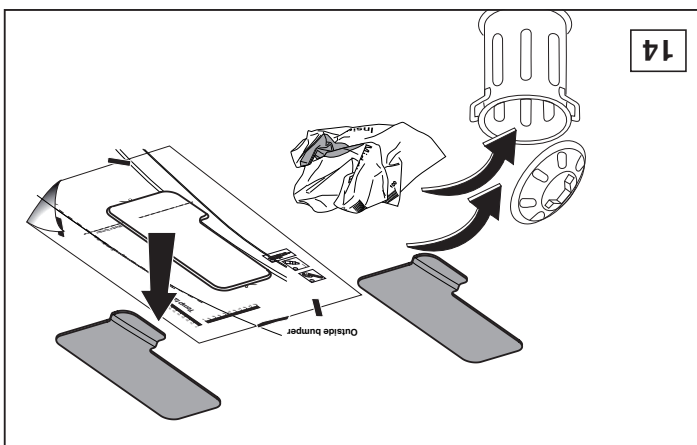
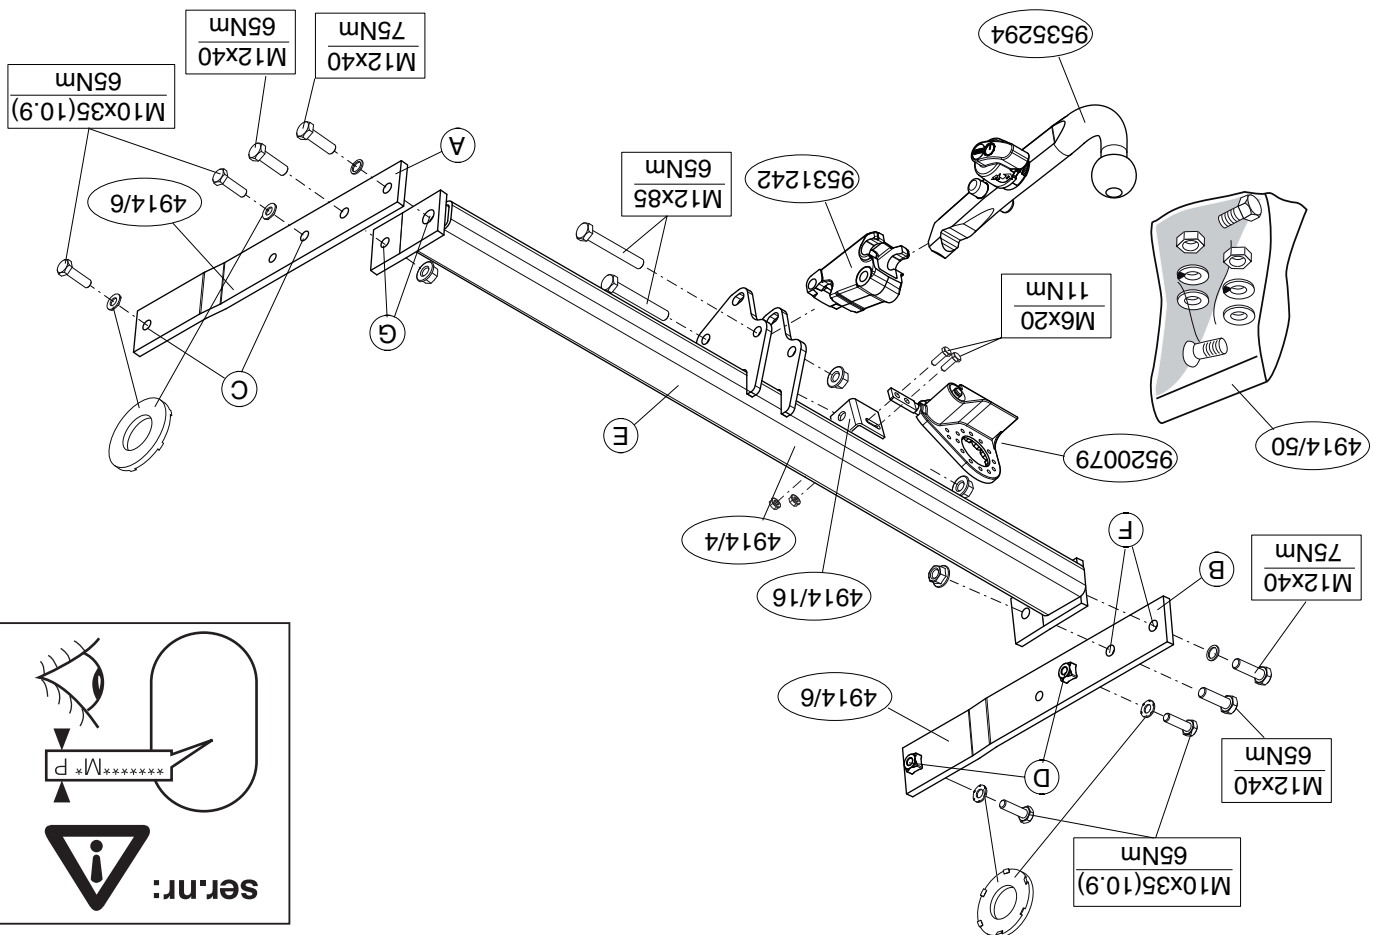
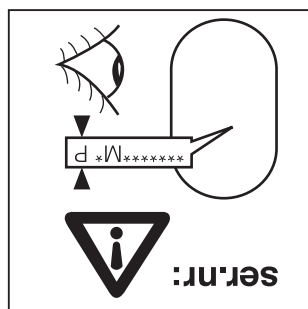


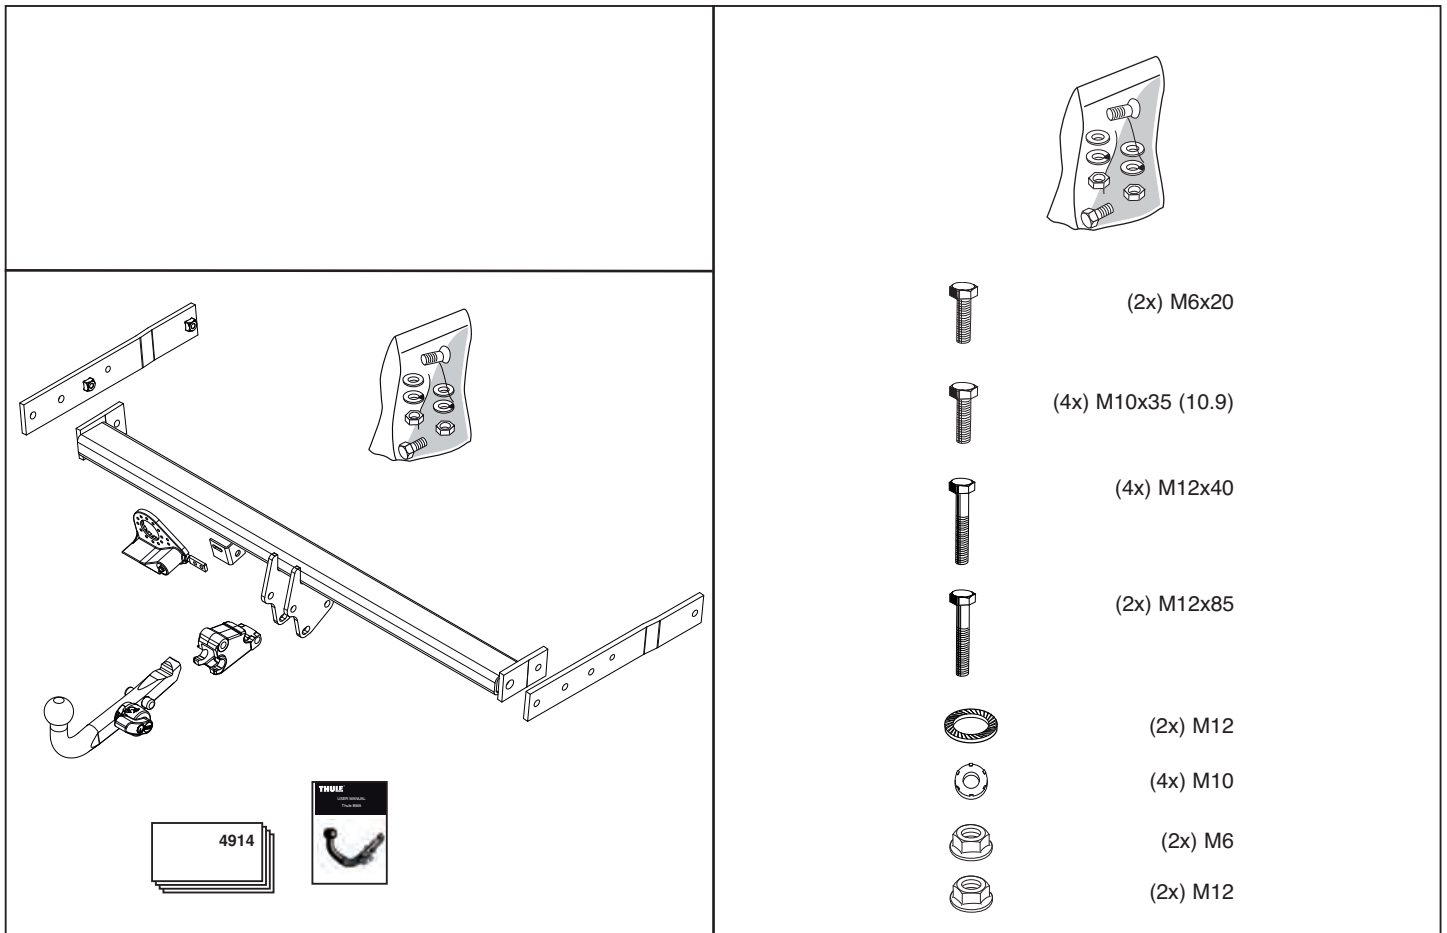


© 491470/19-10-2012/3

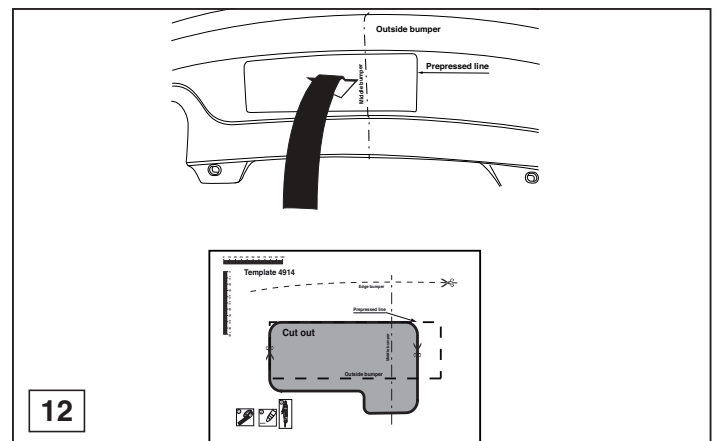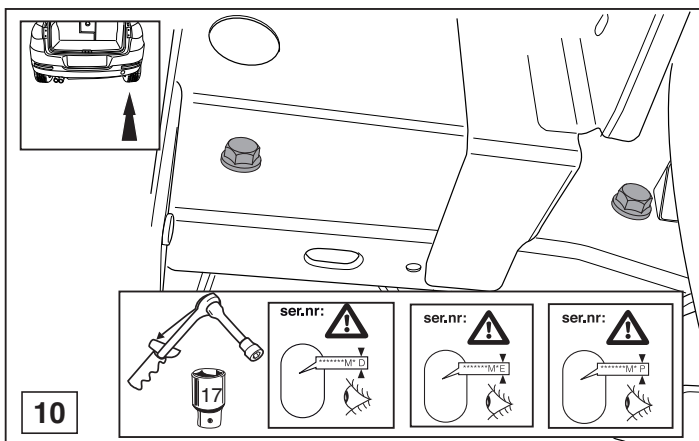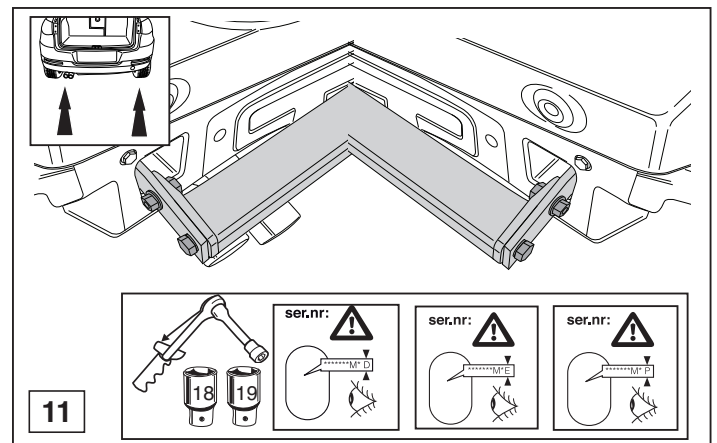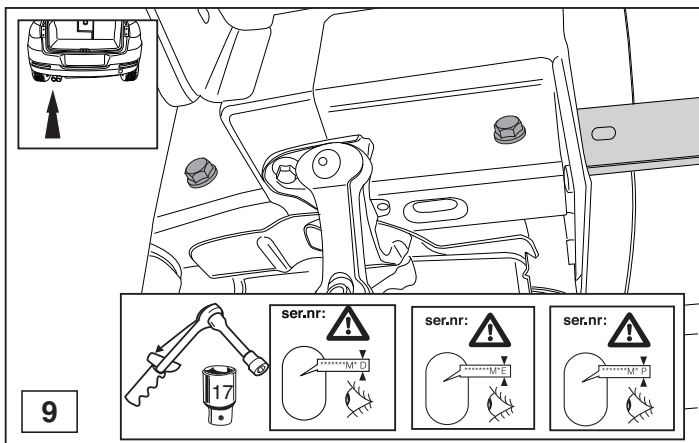

© 491470/19-10-2012/8

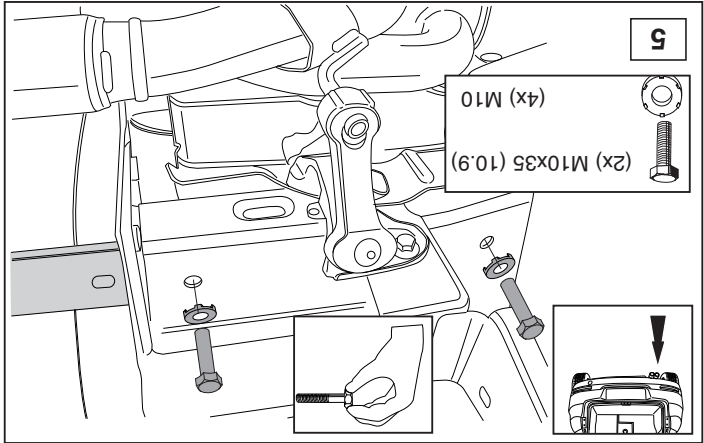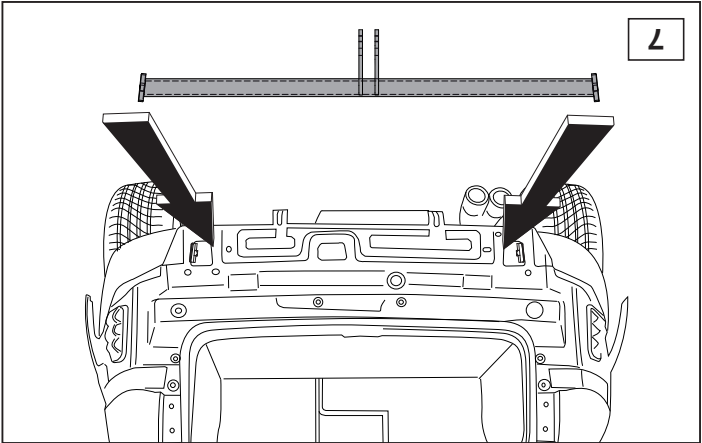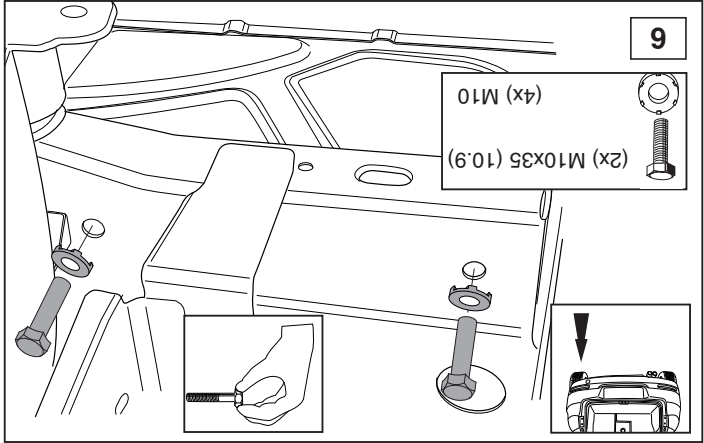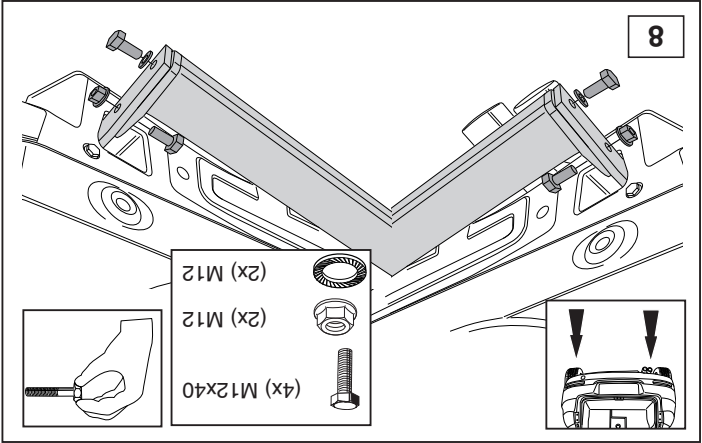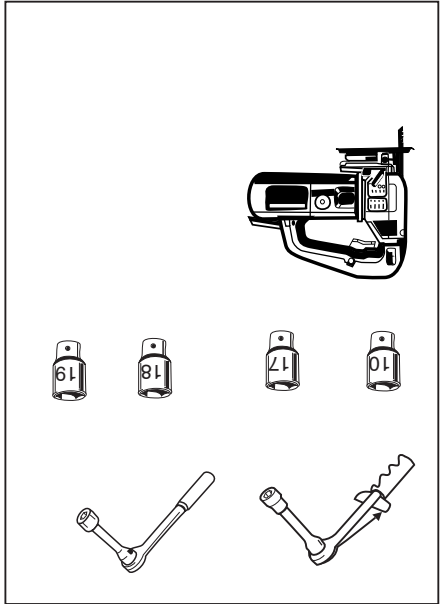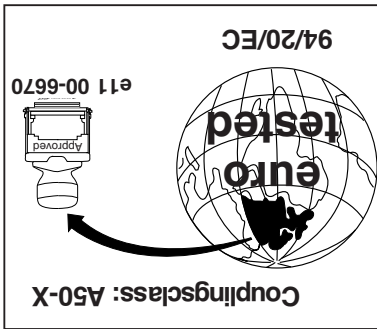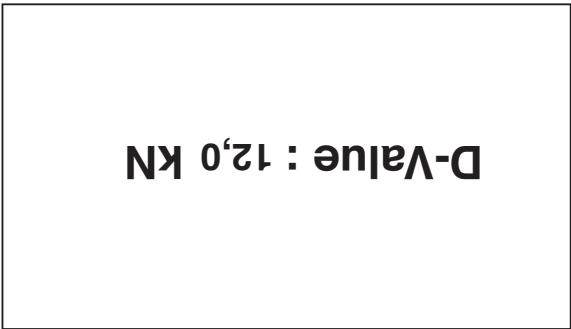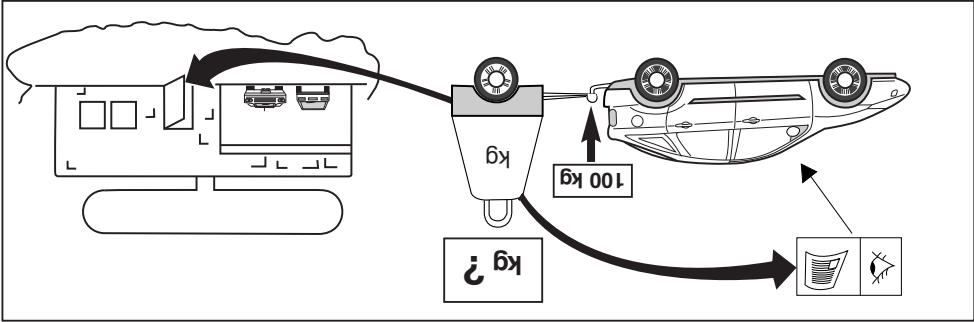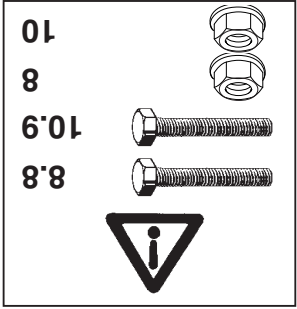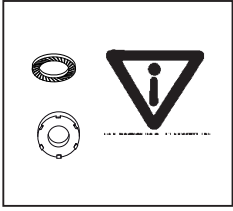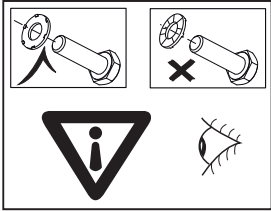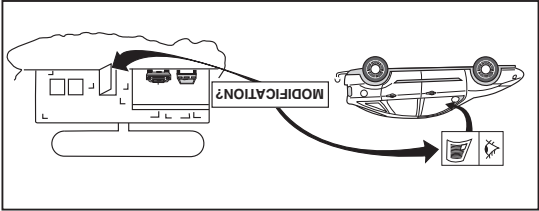

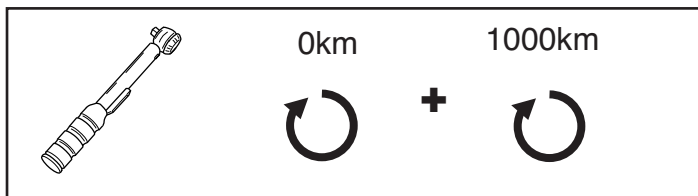

NOTE:

* Should this installation process entail the cutting of the bumper – confirmation **MUST** be obtained by the installation engineer of the customer's acceptance prior to completion. Thule Towing Systems do not accept responsibility for any matters arising as a result of this miscommunication.

All measurements are in mm!





HINWEISE:

* Die für das Fahrzeug zugelassene Anhängelast ist den Fahrzeug Unterlagen zu entnehmen. Bei Änderungen des Fahrzeuggewichtes muß die höchstzulässige Anhängelast gegebenenfalls aus dem D-Wert nachgerechnet werden.

Auskunft hierüber kann Ihr Fachhändler oder der TÜV geben.

* Elektrische Anlage gemäß StVZO anbringen.

© 491470/19-10-2012/5

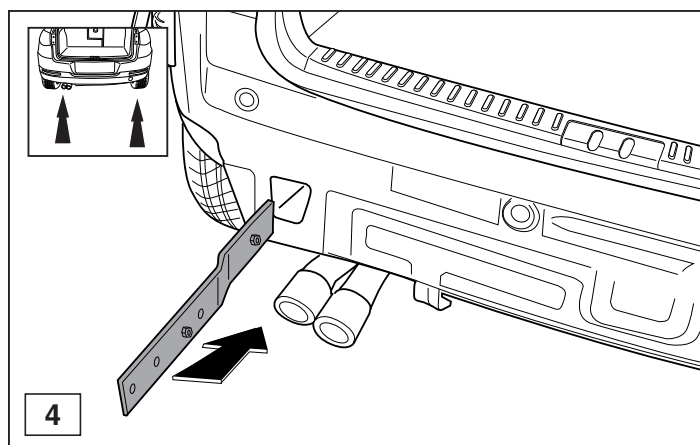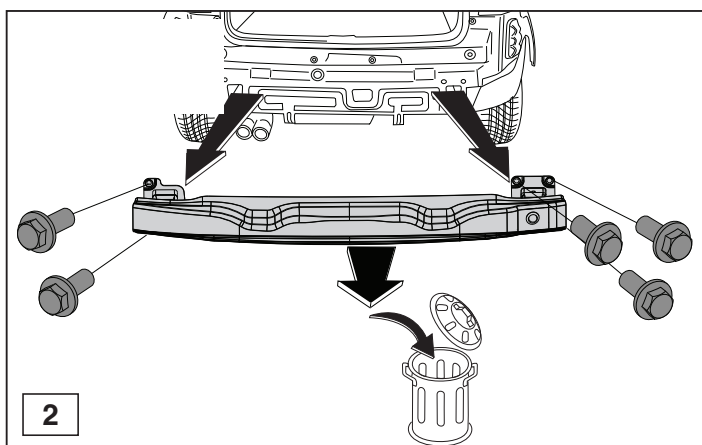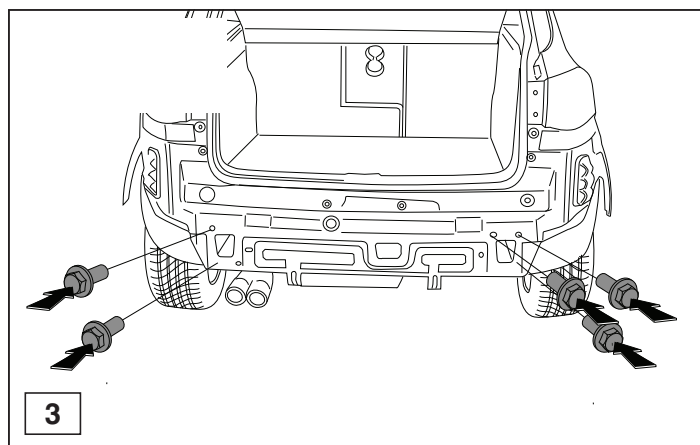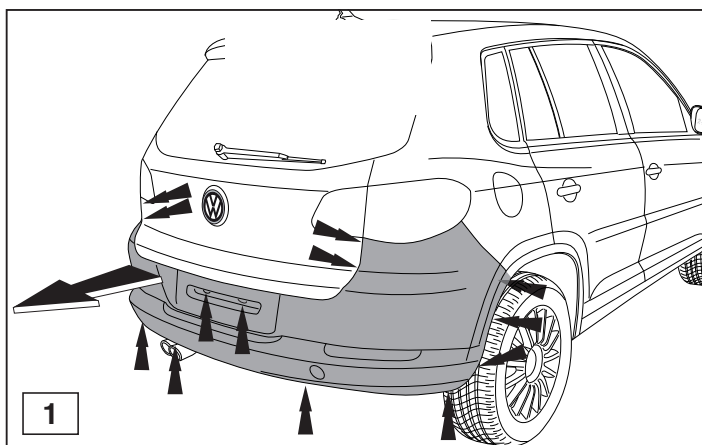

© 491470/19-10-2012/6